



Logitech MBJ58 Mouse Resistance Spring Replacement

You will install the resistance spring.

Written By: Maximilian Betkowski



INTRODUCTION

You will learn how to remove and install the resistance spring.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Top cover




- Hold the mouse in your hand so that the bottom side is facing upward.
- Locate the #1 screw towards the bottom half of the mouse.
- Take the 4.76 mm Phillips screwdriver and unscrew the #1 screw that was previously located.

Step 2




- Place the mouse back on the hard surface, with the bottom side touching the hard surface.
- Gently, lift up the top cover of the mouse and remove.

Step 3 — Scroll Wheel

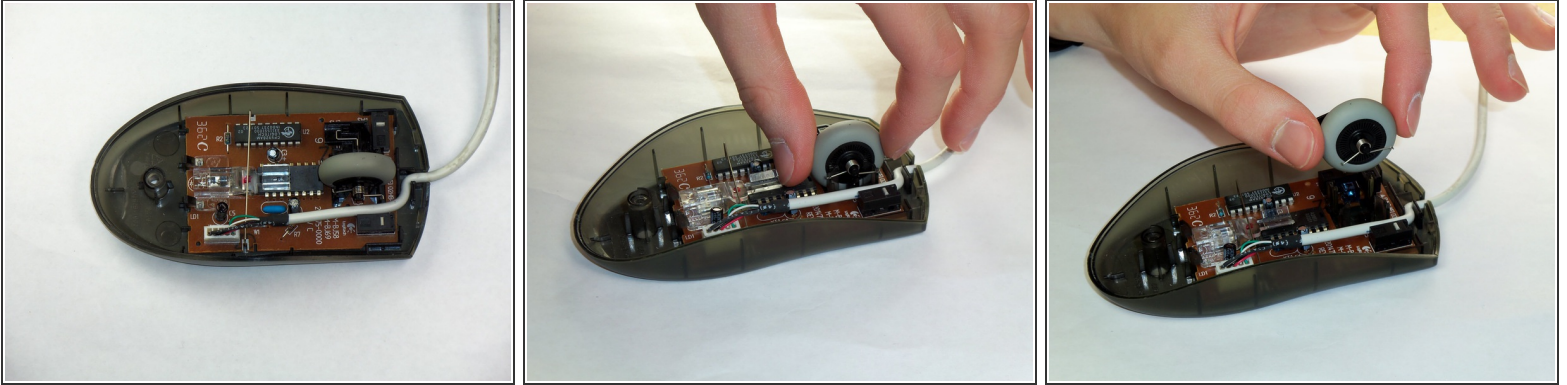


- Locate the scroll wheel on the mouse.
- Grab the scroll wheel with your thumb and index finger.
- Gently lift up to remove the scroll wheel from the mouse.

Step 4 — Support Spring

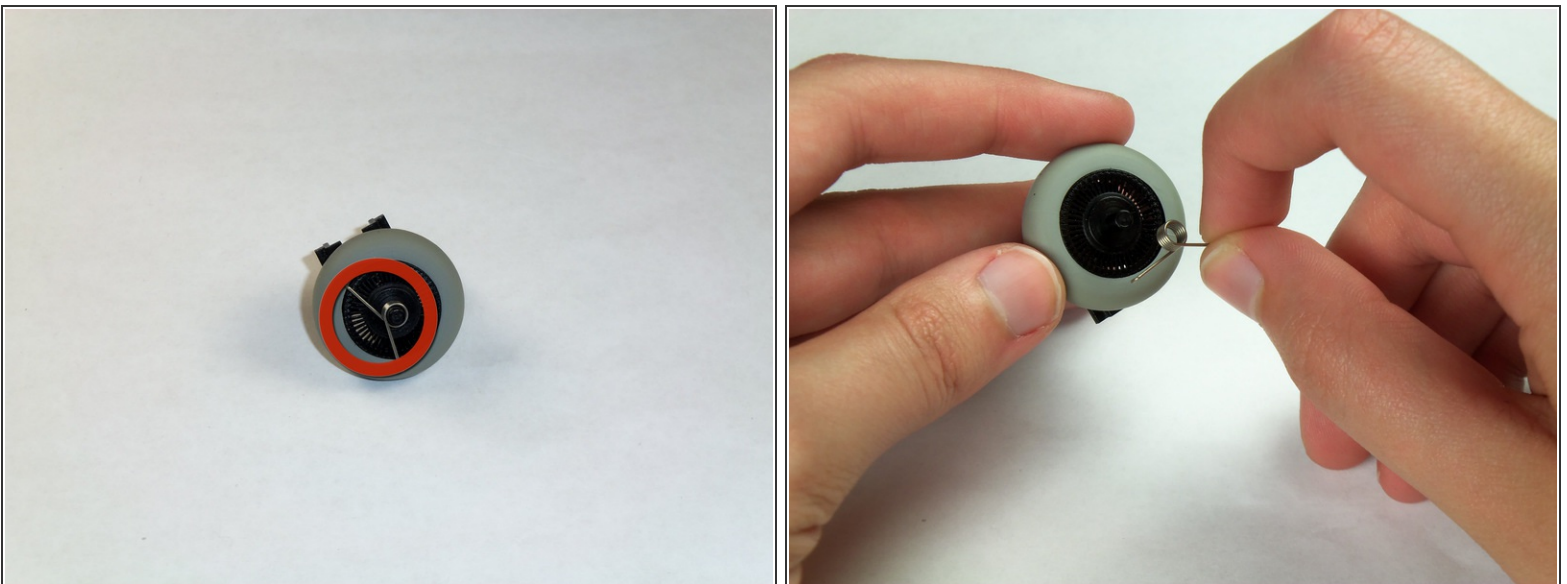

- Locate the spring on the scroll wheel. The spring looks like a small, metal piece of wire, coiled up in the middle.
- Very carefully, remove the spring from the wheel scroll.



Step 5 — Attaching the New Spring

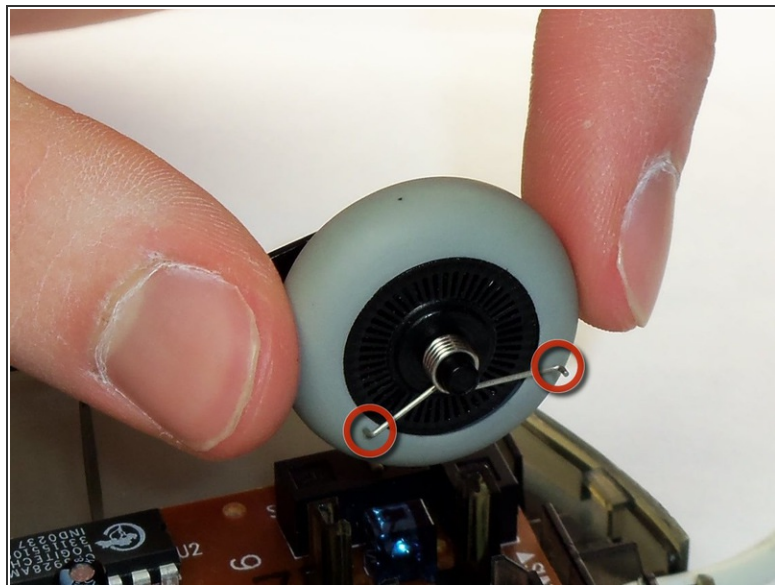


- Replace the spring making sure it is placed on the right side of the wheel with the prongs pointing down.


 The right side is the side without the black plastic square as shown in the photos.

Step 6 — Scroll wheel and mount

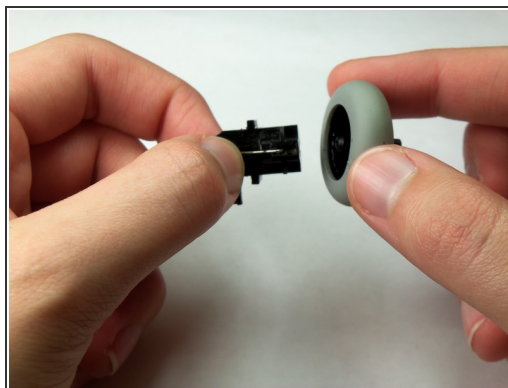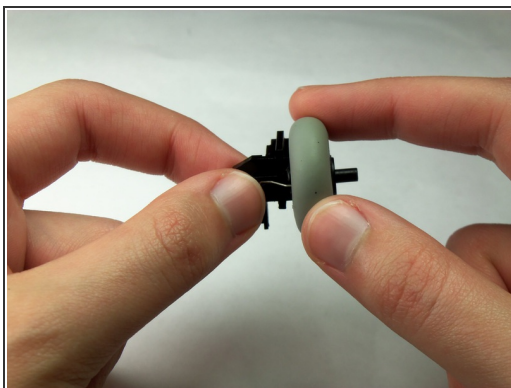


- Be aware of where the resistance spring is.
 -  This spring will easily fall off.
- Grab the scroll wheel and its mount and gently pull them apart.

Step 7 — Resistance Spring

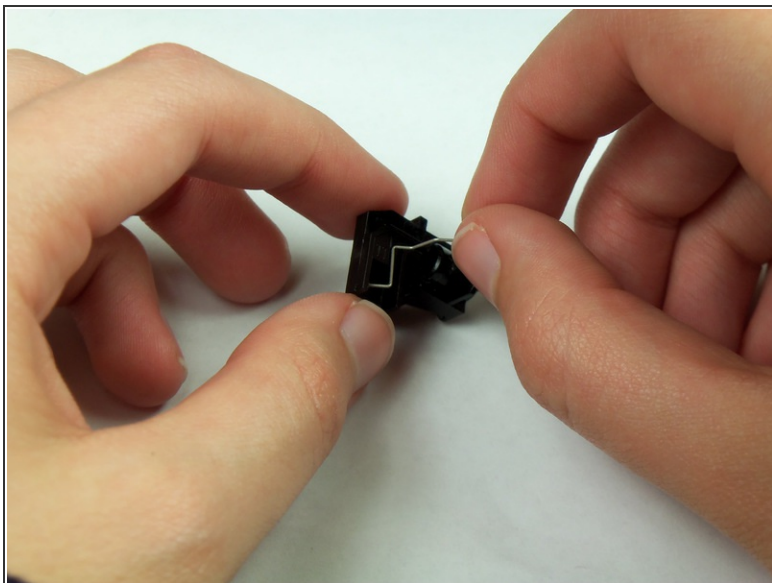

- Grasp the top of the resistance spring then pull it towards yourself so the bottom slides out of its hole.

Step 8

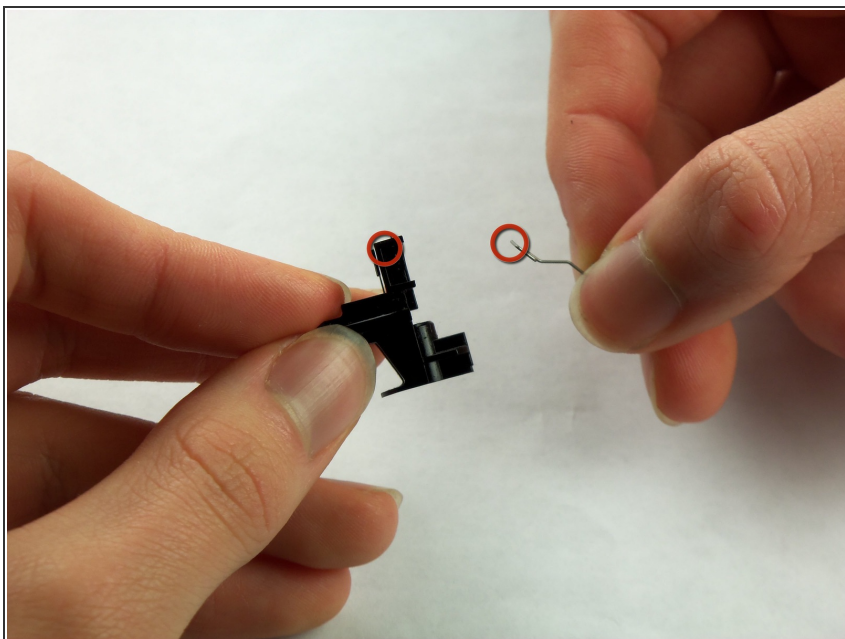

- When installing the resistance spring place the hooked section of the spring in its corresponding hole on the mount.

To reassemble your device, follow these instructions in reverse order.

